


Migrating Your Data from Drobo to DroboElite

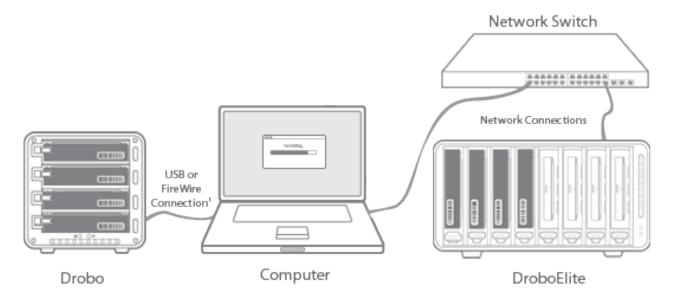

In general, you **cannot** migrate data by moving hard drives from the Drobo to the DroboElite. Instead, you will need to **copy the data from the Drobo to the DroboElite**.

- Install the version of Drobo Dashboard software that came with your new DroboElite (or later).
- 2. Connect your Drobo to your computer via the USB/FireWire connection1.
- 3. Connect your computer and your DroboElite to a network switch.
- 4. Configure the iSCSI setup on your DroboElite so your computer is on the same subnet as the DroboElite.
- 5. Ensure your computer and DroboElite are connected via iSCSI
- 6. Verify your DroboElite has sufficient free capacity to accommodate the additional data from Drobo.
- 7. Once connected, simply copy your files from Drobo to DroboElite.
- 8. Verify ALL files are in place and fully accessibly on DroboElite.
- **9.** If you would then like to add the drives from the Drobo to the DroboElite, remove the drives from Drobo and place them one at a time in the free data bays in DroboElite.

Note that this will ERASE ALL DATA on these drives. This step cannot be undone. If you are unsure if you have successfully copied all data onto DroboElite, **do not complete this step.**

Drobo • 2460 North First Street, Suite 100, San Jose, CA 95131 • www.drobo.com • 1.866.97.DROBO
Copyright 2011 Drobo, Inc. Data Robotics, Drobo, DroboElite, DroboPro, Drobo, BeyondRAID, and Smart Volumes are trademarks of Drobo, Inc., which may be registered in some jurisdictions. All other trademarks used are owned by their respective owners. All rights reserved.

Specifications subject to change without notice. • TS-0065-00 • October 2011

¹ FireWire connection is available on 2nd generation Drobo only.